


LAVATHERM 56800

Condensation dryer

User information

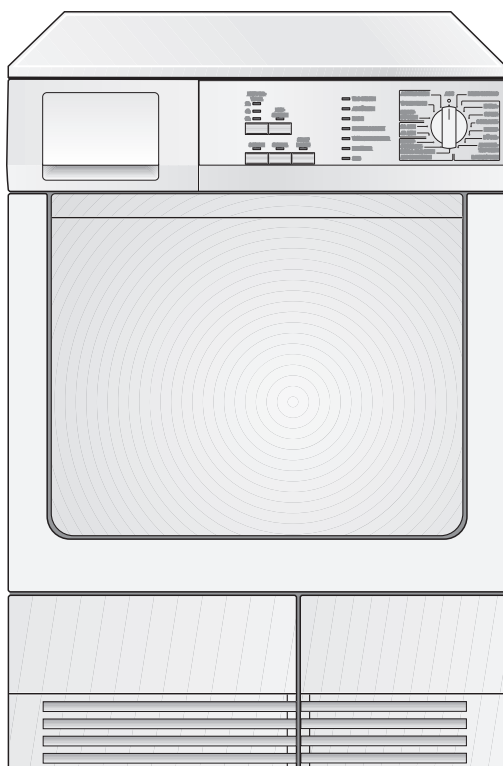

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety	5
Disposal	7
Environmental tips	8
Description of machine	9
Operating screen	9
Overview of programmes	10
Before the first drying cycle	12
Sorting and preparing laundry	12
Drying	13
Switching machine on / switching light on	13
Opening loading door / loading laundry.....	13
Selecting the programme	13
Selecting additional functions.....	13
AUDIBLE SIGNAL.....	14
SPECIAL CARE.....	14
SENSITIVE	14
Setting time delay	14
Starting the programme.....	15
Changing programme	15
Putting in extra items or taking items out before end of programme	15
Drying cycle complete / removing laundry.....	16
Cleaning and maintenance	17
Cleaning fluff filter	17
Cleaning the door seal.....	18
Emptying the water reservoir.....	19
Cleaning heat exchanger	20
Cleaning the drum.....	21
Clean operating screen and housing	21
What to do if...?	21
Troubleshooting by yourself.....	21
Changing bulb for inside light	23
Programming options	24
Technical data	25
Consumption values	25

Installation and connection instructions.....	26
Installation safety instructions	26
Removing transport safety equipment	26
Electrical connection.....	27
Door reversal instructions	27
Special accessories.....	28
Guarantee/Customer Service.....	29
Service	31

Operating Instructions



Safety

Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic applications.
- Conversions or modifications to the dryer are not permitted.
- This dryer is intended only for drying textile material washed in water.
- To minimize the risk of fire in a tumble dryer, the following should be observed:
 - Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
 - Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
 - If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The „cool down“ cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.
 - Items that have been previously cleaned in, washed in, soaked or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.
 - Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol / gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers should not be placed in a tumble dryer.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.
- rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Never operate the dryer without fluff filters or with damaged or blocked fluff filters. Risk of fire!
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The covering bonnet of the bulb for the drum light must be screwed down tightly.

Safety of children and infirm persons

- The appliance is not intended for use by young children or infirm persons without supervision.
- Children are often not aware of the dangers involved when handling electrical equipment. Therefore provide the necessary supervision of children when operating the appliance and do not let children play

with the dryer – there is a danger that children could become trapped inside the appliance.

- Packaging parts (e.g. films, styropore) can be dangerous for children. Danger of suffocation! Keep packaging parts out of reach of children.
- Make sure that children or small animals do not climb into the drum of the dryer. For this purpose keep the door of the dryer closed when the appliance is not in use.

General safety

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Warning! Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.

Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.




Environmental tips


- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
 - always keep the ventilation slots on the base of the dryer unobstructed;
 - use the loading volumes specified in the programme overview;
 - ensure you have good ventilation in the installation room;
 - clean the micro-fine filter and fine strainer after each drying cycle;
 - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY programme.

Pre-draining			Drying cycle	
Revolutions per minute	Residual dampness		Required time in minutes	Energy in kWh
	in litres	as a %		
800	4.2	70	130	3,84
1000	3.6	60	115	3,36
1200	3.2	53	110	3,10
1400	3.0	50	100	2,80
1800	2.5	42	90	2,60


Description of machine

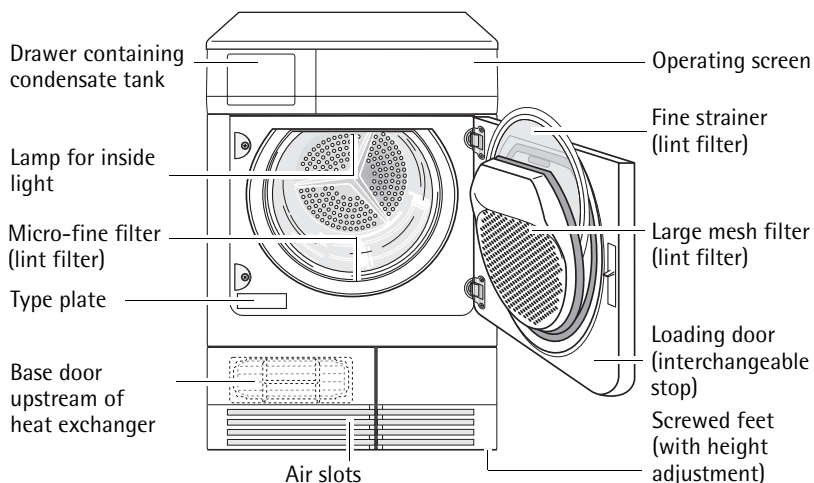

Operating screen

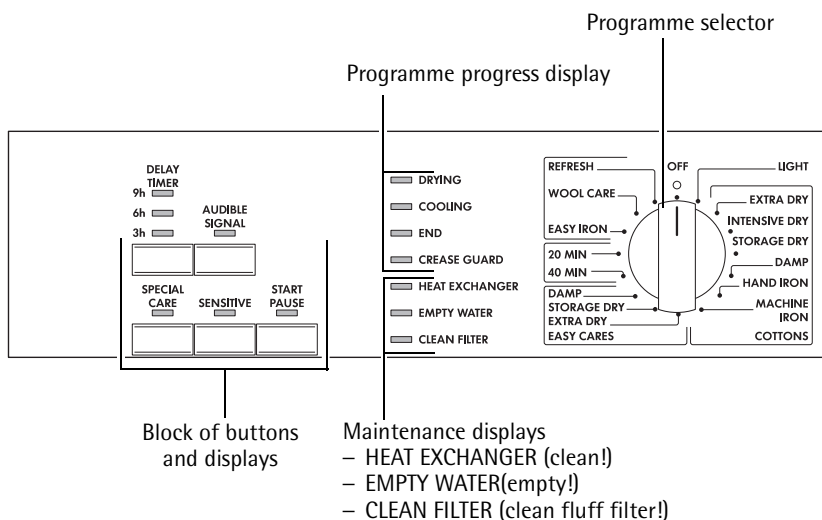







Overview of programmes

Programme		max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
			AUDIBLE SIGNAL	SPECIAL CARE ¹⁾	SENSITIVE ¹⁾		
COTTONS	EXTRA DRY	6 kg	•	•	•	Drying thick or multi-layered textiles, e.g. terry towelling items, bathing costumes.	 
	INTENSIVE DRY	6 kg	•	•	•	Drying thick textiles, e.g. terry towelling items, towels.	 
	STORAGE DRY	6 kg	•	•	•	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.	 
	DAMP	6 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	 
	HAND IRON	6 kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	 
	MACHINE IRON	6 kg	•	•	•	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.	 
EASY CARES	EXTRA DRY	3 kg	•	•	•	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.	  ²⁾ 
	STORAGE DRY	3 kg	•	•	•	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, corsetry.	  ²⁾ 
	DAMP	3 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	  ²⁾ 

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.

2) Press the SPECIAL CARE button!

Programme	max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
		AUDIBLE SIGNAL	SPECIAL CARE ¹⁾	SENSITIVE ¹⁾		
20 MIN 40 MIN	1 kg	•	•	-	For drying individual items of laundry or for small volumes of less than 1 kg.	  ²⁾ 
EASY IRON	1 kg	•	•	-	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.	  ²⁾ 
WOOL CARE	1 kg	•	•	-	Special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods. Wool fibres are aligned and the wool becomes soft and snugly. Recommendation: Remove textiles immediately after drying.	
REFRESH	1 kg	•	•	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)	

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.

2) Press the SPECIAL CARE button!





Before the first drying cycle

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (20 MIN) with damp cloths in the machine.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
 - Cotton/linen for programmes in COTTONS programme group.
 - Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

			
Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (press SPECIAL CARE button!)	Drying in tumble dryer not possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

Preparing laundry


- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / loading laundry

1. Open loading door:
Push against the loading door (push point )
2. Load your laundry (do not force it in/overload the machine).




Caution! Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.


Selecting the programme

Use the programme selector to set the programme you require.

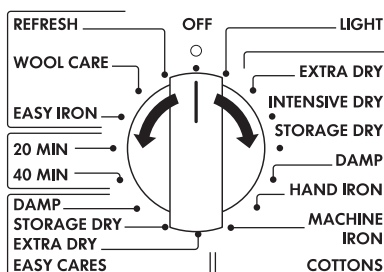

Selecting additional functions


If required, press the AUDIBLE SIGNAL, SPECIAL CARE or SENSITIVE buttons.

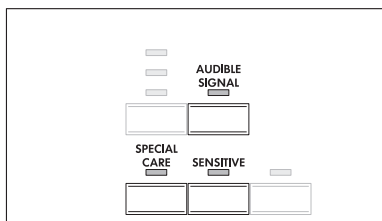

AUDIBLE SIGNAL

When the drying cycle has finished, an intermittent audible signal will sound.

SPECIAL CARE

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

SPECIAL CARE is only suitable for use with loads of up to 3 kg!

SENSITIVE

For gentle drying of frequently-worn textiles. Programme starts on full heat setting, which is then reduced towards the end of the programme to ensure gentle care of laundry.



SPECIAL CARE and SENSITIVE cannot be selected together.

Setting time delay



The DELAY TIMER button allows you to delay the start of a programme by 3, 6 or 9 hours.

1. Select the programme
2. Press the DELAY TIMER button as many times as necessary until the required display is illuminated:
 - 9h display for programme to start in 9 hours.
 - 6h display for programme to start in 6 hours.
 - 3h display for programme to start in 3 hours.



By pressing the DELAY TIMER button again, the time delay is cancelled. The display goes out.

3. To activate the delay timer, press the START/PAUSE button.

Note: If a time delay of 9 hours is selected, the display **9h** is illuminated. After 3 hours, the display will jump round and **6h** will be illuminated; after another 3 hours, **3h** is illuminated. After a total of 9 hours, the programme will start.

Starting the programme

Press the START/PAUSE button. The programme is started.
The programme progress display show drying progress.

Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.



The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the AUDIBLE SIGNAL button) is pressed, the corresponding indicator flashes several times. The drying programme is not however affected by this (laundry protection).

Putting in extra items or taking items out before end of programme

1. Open door.



Warning! Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.

3. Close door securely.

4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying cycle is complete, the END and CREASE GUARD displays light up. If the AUDIBLE SIGNAL button has been pressed, an audible signal sounds intermittently.



The drying cycle is automatically followed by a crease guard phase which lasts around 30 minutes. The drum rotates in intervals during this phase. The laundry thereby remains relaxed and free of creases. The laundry can be removed at any time during the crease guard phase. (The laundry should be taken out towards the end of the crease guard phase at the latest to prevent creases from forming.)

1. Open loading door
2. Before removing the laundry, remove lint from the micro-fine filter. It is best to use a damp hand for this purpose (refer to "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme selector to OFF.
Important! After each drying cycle
 - clean the micro-fine filter and fine strainer,
 - drain the condensate tank(refer to the "Cleaning and maintenance" section).
5. Close loading door.

Cleaning and maintenance


Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.




Caution! Never operate the dryer without fluff filters or with damaged or blocked fluff filters.


1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

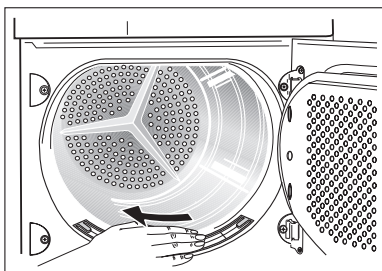

3. Push down unlock button on large mesh filter.
Large mesh filter jumps up.

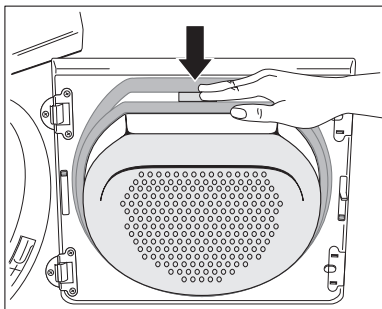

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

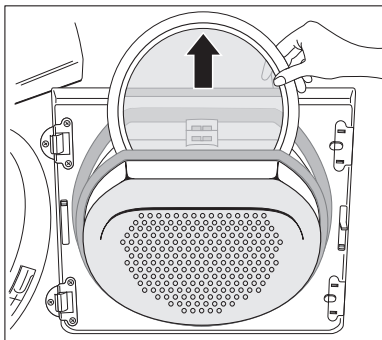


Clean the entire filter area




The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

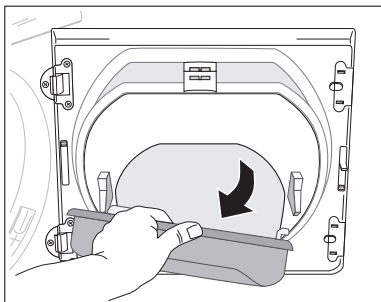

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

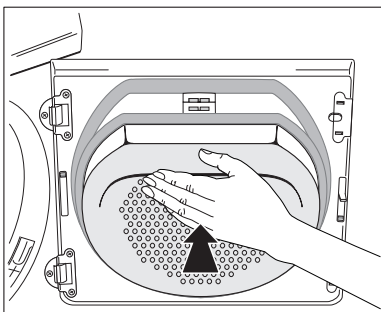

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the water reservoir


Empty water reservoir after every drying cycle.

If the water reservoir is full, an active programme will be interrupted automatically and the EMPTY WATER display will light up. In order to continue the programme, the water reservoir must be emptied.




Warning! The condensed water is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing water reservoir completely (1) and pull up the water reservoir's drainage pipe as far as it will go (2).

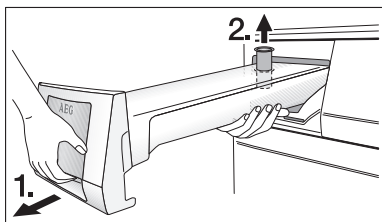

2. Pour condensed water out into a sink or other suitable container.
3. Slide outlet connections in and re-fit water reservoir.

If the programme has been interrupted as a result of the water reservoir being full:
Press the START/PAUSE button to continue the drying cycle.

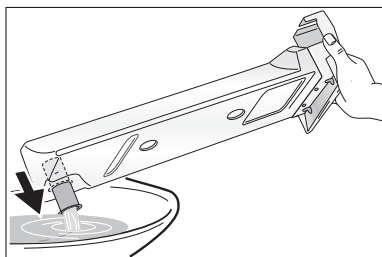

The water reservoir has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.



The condensed water can be used as distilled water, e.g. for steam ironing. However first filter it (e.g. with a coffee filter) to remove any residue and small pieces of fluff.



Cleaning heat exchanger

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.




Caution! Operating when the heat exchanger is clogged with lint can damage the dryer. This also increases energy consumption.

1. Open loading door
2. Open base door. To do this, press the release button located beneath the loading aperture and open the base door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

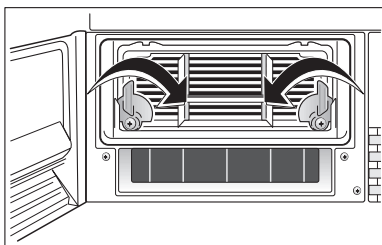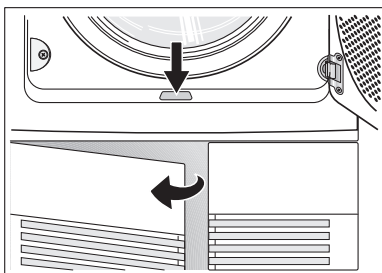

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

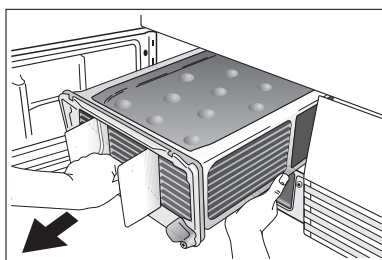

Caution! Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.

7. Clean heat exchanger.
It is best to use a brush or to rinse thoroughly with a shower head.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close base door.



The dryer will not operate if the HEAT EXCHANGER indicator is still lit.



Caution! Never operate the dryer without the heat exchanger.

Cleaning the drum



Caution! Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing



Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if...?

Troubleshooting by yourself

If, during operation, the dryer shows an error display (one or more displays flashing on the programme progress display), check first of all whether you can remedy the problem yourself by means of the table below. If you cannot solve the problem: Switch the machine off and on again. Reset programme. Press the START/PAUSE button.

If the error display is still shown, please contact your local Service Force Centre and inform about flashing displays.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
	Conductance of water at installation site differs from standard setting of machine.	Re-programme standard setting for degree of drying (see 'Programming options' section).
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place.	Install fine strainer and/or snap large mesh filter into place.
When pressing a button, the corresponding button flashes several times.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to LIGHT or to any programme.
	Defective lamp.	Replace lamp (see next section).
Programme inactive, EMPTY WATER display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/PAUSE button.
Drying cycle ends shortly after programme starts. END display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY instead of STORAGE DRY).

Problem	Possible cause	Remedy
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle finishes automatically (see "Drying cycle complete").	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	SPECIAL CARE button pressed and load volume too big.	SPECIAL CARE is only suitable for use with loads of up to 3 kg!
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.

Changing bulb for inside light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the after-sales service, ET-Nr. 112 552 000-5.



Warning! Do not use standard bulbs! These develop too much heat and may damage the machine!



Warning! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew covering bonnet from above bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw covering bonnet back down.



Warning! For reasons associated with safety, the covering bonnet must be screwed down tightly. If this is not done, the dryer must not be operated.

Programming options

Objective	Implementation
Permanently programme in the audible signal which reminds you that the programme is complete.	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the AUDIBLE SIGNAL button and hold down for approx. 5 seconds. A brief signal sounds several times. The AUDIBLE SIGNAL display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.
Adjust 'level of dryness' detection: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the AUDIBLE SIGNAL and SENSITIVE buttons at the same time and hold down for approx. 5 seconds. The current setting is displayed on the programme progress display: <ul style="list-style-type: none"> – END display: Setting for drier laundry – COOLING display: Standard setting – DRYING display: Setting for damper laundry 3. Press the START/PAUSE button until the setting required appears on the programme progress display. 4. Turn the programme selector to OFF. The setting is permanently programmed.
To deactivate the EMPTY WATER display when using an external drain for the condensed water.	<ol style="list-style-type: none"> 1. Turn the programme selector to any programme. 2. Press the DELAY TIMER and SPECIAL CARE buttons at the same time and hold down for approx. 5 seconds. The EMPTY WATER display flashes briefly. The EMPTY WATER display is permanently deactivated. Settings may be cancelled as under 1 and 2, but the EMPTY WATER display is briefly illuminated (instead of flashing).

Technical data



This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 42 kg
Loading volume (depends on programme) ¹⁾	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY programme)	3,36kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY ¹⁾	6	3,36
COTTONS HAND IRON ¹⁾	6	2,70
EASY CARES STORAGE DRY ²⁾	3	1,20

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

Installation and connection instructions



Installation safety instructions



- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

Removing transport safety equipment



Caution! Before first starting up, all parts of the transport safety equipment must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

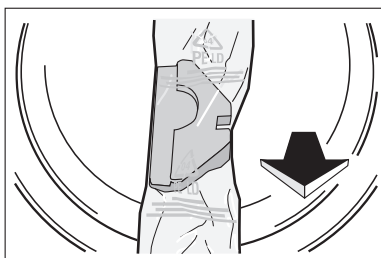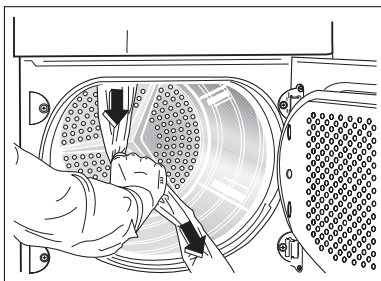

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

Important:

The plug must be accessible after the appliance has been installed.

Door reversal instructions




Warning! The door may only be reversed by a specialist.


If necessary, please contact your local Service Force Centre.

Warning! Before reversing the door, disconnect the mains plug; with a permanent connection: remove the fuse.

1. Open door.
2. Unscrew hinge A from the front of the machine and take off the door.
3. Carefully pry off cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Unfasten locking block D from the snap-on fixture, take out and reinsert on the other side, having rotated the block through 180°.
5. Unscrew hinge A from the door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.

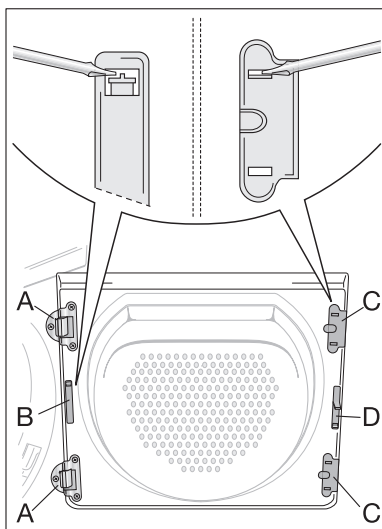

7. Unscrew cover plates E from the front of the machine, rotate through 180, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
10. Transfer door lock F to the opposite-side and screw down.
11. Fix cover G on to the other side and allow the snap-in button to lock in place.
12. Insert door and hinges into recesses on the front of the machine and screw down.

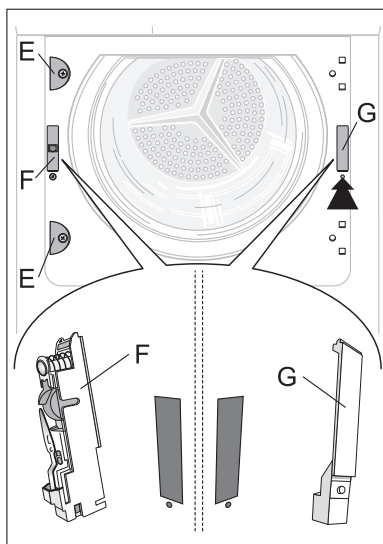

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer:

These intermediate installation kits can be used to arrange the dryer and an automatic AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.

Two versions can be supplied:

- without stacker plate 916 019 102
- with extractable stacker plate 916 019 103

Installation kit for external condensate drain

Installation kit (125 122 510) for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER display.

Max. displacement height: 1 m from the base of the dryer; max. displacement length: 3 m

Guarantee/Customer Service

Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas

In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales, las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevőszolgálati irodák külföldön

Ezekben az országokban a mi AEG-Electrolux vevőszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

U.A.E. Abu Dhabi Universal Trading Company P.O. Box 43 99 Tel.: 6335331 Service Center 6733974	Jordan Jordan Household Supply Co. Ltd. P.O. Box 3/68 Amman/Tel.: 69 70 50	Malta ITC International Trading Company White House Building Mountbatte Street Blata L-Bajda/Tel.: 220644
Egypt Middle East Commercial Center 4 Salah El Dein St. - 2nd floor Heliopolis, Kairo Egypt Tel.: 2024181719	Canada EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985	Mauritius Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355
Australia The Andi-Co Group 1 Stamford Road Oakleigh VIC 3166 Tel.: (03) 9569 1255 Fax: (03) 9569 1450 www.andico.com.au	Korea (South) Core Incorp. 3/F Chewoo Bldg. 200 Nonhyun-Dong Kangnam-Ku 135-010 Seoul Telefon 82 2 549 89 61	Namibia AEG NAMIBIA (PTY) LIMITED-Jeppe Street Northern Industrial Area Windhoek Tel.: (061) 21-6082/4 Fax: (061) 217838

Bahrain/Arabian Gulf A.A. Zayani & Sons P.O. Box 9 32 Bahrain Tel.: 17311124	Croatia Electrolux D.O.O. Suplova 7 10000 Zagreb Tel.: 1 61 19512 Fax: 1 61 19513	New Zealand Monaco Corporation Ltd. 10 Rothwell Avenue Albany - Auckland 4399 Auckland 1 New Zealand Tel.: 00 64-92 59 11 11 Fax: 00 64-92 59 11 12
Bulgaria Electrolux Bulgaria E.O.O.D. 91 Levski Blvd. 1000 Sofia Tel.: 2 806676 Fax: 2 980 5276	Kuwait/Arabian Gulf Ali Al-Ghanim Est. P.O. Box 21540 - Safat Tel.: 4822190 Fax: 4820116	Syria WATTAR CO. P.O. Box 36109 Mazzeh - Damascus Direct Phone: 00963116132649 Fax: 00963116119537
Cyprus Hadjikyrlakos & Sons Ltd. Prodromou 121 P.O. Box 21587 Nicosia 1511 Service Telephones: Nicosia 02 481226 Limassol 05 562182 Larnaca 04 633929 Paphos 06 932 699	Lebanon Adib & Assaferi P.O. Box 539 Tripoli	Iran ARIAN International Development Co. AEG Showroom Shariati, Balatar as Safar Teheran / Iran Phone No. Showroom: 021 / 285 513 / 4 Phone No. Service: 021 / 312 27 67 / 8
Estonia Electrolux Estonia Ltd. Mustamäe tee 24 EE0006 Tallinn Tel.: (372) 6 650 090 Fax: (372) 6 650 092	Latvia Electrolux Latvija Ltd. Kr.Barona iela 130/2 Riga, LV-1012 Tel.: 371 7313626 Fax: 371 7845954	Poland Electrolux Poland Sp. zo.o. ul. Domaniewska 41 02-034 Warszawa tel.: 022 874 33 33 fax: 022 874 33 00
Hong Kong Dah Chong Hong Ltd. 20 Kai Cheung Road Kowloon Bay Kowloon - Hong Kong Tel.: 0085222621620 Fax: 0085227550333	Lithuania Electrolux Lithuania Verkui 29 2600 Vilnius Tel.: 372 272 3326 Fax: 372 272 3366	Russia Electrolux Russia Ltd. 16 Olympiysky prospekt 129090 Moscow Tel.: (095) 937 7837 Fax: (095) 926 5513
Israel Evis Ltd. Tadiran-Ampa Service 10 Gibonay Israel Street New Industrial Zone Netanya, 42504 Israel	Malaysia Arzbergh Engineering No. 49A/B, Jalan Petaling Utama 7 4600 Petaling Jaya Tel.: 3 795 1084 Fax: 3 795 1082	Saudi Arabia Awad Badi Nahas Est Shara Siteen Jeddah 21463 Phone: 6646583 Alia Trading Co Mecca Road Riyadh 11491 Phone 4645977
Japan Electrolux Japan Ltd. Domestic Appliances Department Maruzen Showa Warehouse Building Tookai 4-5-12, Ota-ku 143-006 Tokyo Tel.: 0120-13-7117 Fax: 03-3790-5257	Singapore Group Pte Ltd. 833 Bukit Timah Road Unit no. 01-11 Royalville 279887 Singapore Tel.: 0065 64638484 Fax: 0065 64638488	Slovenia Electrolux Slovenia D.O.O. Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238

Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334	Slovakia Rep. Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976	South Africa AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111
Hungary Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200	Czech Rep. ELECTROLUX DOMÁCÍ SPOTŘEBIČE CZ DIVIZE ELECTROLUX S.R.O. Customer Centre Hanusova ul. 140 21 Praha 4 Tel.: 2 6112 6112 Telefax: 2 6112 3504	


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

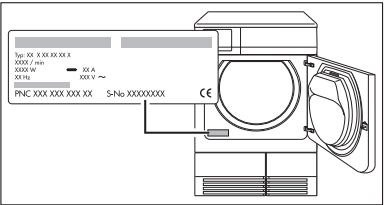

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg-electrolux.de>

© Copyright by AEG

822 944 846-01-180406-02

Subject to change without notice